# CARSON° LIGHTED RIMFREE


2X POWER LED LIGHTED RIMLESS MAGNIFIER

# **Instructions for use:**

**To Activate LED Light** 


To turn light on, slide switch located on side of handle up (Fig. 1).

**Note:** Please remove battery tab before first use.

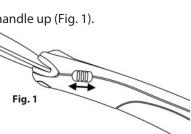

# **Replacing Batteries**

Locate battery door on bottom of handle. Remove safety screw and pull back battery door (Fig. 2-3). Pull ribbon to remove spent batteries (Fig. 4) and replace with three fresh AG-10 button cell batteries according to polarity indicators marked on bottom of battery compartment (Fig. 5). Make sure ribbon is placed under batteries for easy removal. Replace battery door and safety screw.

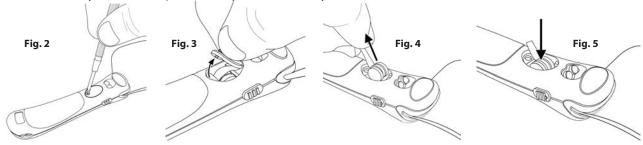

### Safe Storage

Turn off LED light and place lens inside included cloth pouch to avoid damage during storage (Fig. 6).



**Warning:** Use only alkaline batteries. Mixing old and new, different brands or types within brands may cause batteries to leak, overheat or explode. Keep away from fire or excessive heat. Inspect batteries for corrosion or leakage. Insert in direction indicated. Rechargeable batteries not recommended.

### **Cleaning Your Magnifier**

Clean lens with a soft, clean microfiber cloth by rubbing gently in a circular motion. Moisten the lens cloth with water if needed. Do not use harsh chemicals, solvents or abrasives as they may damage the lens.

## **CAUTION - FIRE HAZARD:**

Keep magnifier away from direct sunlight to prevent accidental fire.

### **Customer Service:**

If you experience any difficulties, please contact us and we will be happy to help you.

In the U.S.A. In the U.K. In the E.U.

 Phone:
 1-631-963-5000
 Phone:
 +44 (0) 1938 557440
 Phone:
 +44 (0) 1938 557440

 Email:
 info@carson.com
 Email:
 eusupport@carson.com

RM-77