

# CARSON<sup>®</sup>

## MicroBritePlus<sup>™</sup>

**MM-310**  
For use with MM-300  
MicroBrite Plus

### Smartphone Adapter Clip

Congratulations on selecting your new smartphone adapter clip! In order to achieve optimum performance, please follow instructions for proper use.



#### PRODUCT SPECIFICATION



Weight:	0.025 lbs
Dimensions:	2.5" x 0.68" x 0.875"

#### USING ADAPTER CLIP

1. Align the primary camera of the phone to the center of the circular hole of the adapter clip. Typically, the primary is a 1x wide-angle camera and the other camera(s) are secondary.
2. Attach the adapter clip to the top of the microscope and turn on camera. If viewing image is not centered or is not a complete round image, adjust adapter clip making sure it is centered over camera.
3. Pinch screen to enlarge image. Take photos and videos to share with friends and family.

For the latest instructions, and for selecting primary camera for iPhone 13 Pro and later, visit [www.carson.com/multicam](http://www.carson.com/multicam)

**Note:** Always hold the phone securely during use. If you release the phone while it is attached to the microscope it can fall and damage the phone.

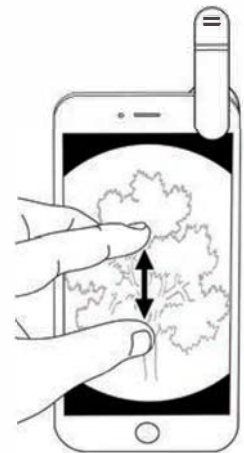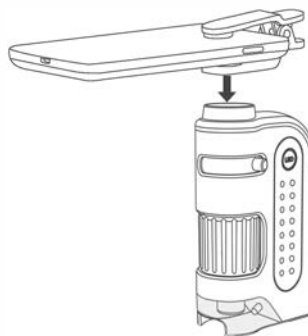

#### USING MM-300 MICROSCOPE

Refer to MM-300 guide for instructions on how to focus microscope.  
Visit [https://carson.com/MM-300-Guide\\_EN.pdf](https://carson.com/MM-300-Guide_EN.pdf)

#### Customer Service:

If you experience any difficulties, please contact us and we will be happy to help you.



✉ [info@carson.com](mailto:info@carson.com)



✉ [uksupport@carson.com](mailto:uksupport@carson.com)



✉ [eusupport@carson.com](mailto:eusupport@carson.com)

For warranty information, visit [www.carson.com/warranty](http://www.carson.com/warranty)

[www.carson.com](http://www.carson.com)

Carson Optical 2070 5th Avenue, Ronkonkoma, NY 11779 | Tel: 631-963-5000