


# CARSON<sup>®</sup> SUREGRIP<sup>™</sup>

2x / 11.5x HAND & STAND MAGNIFIER


SG-16

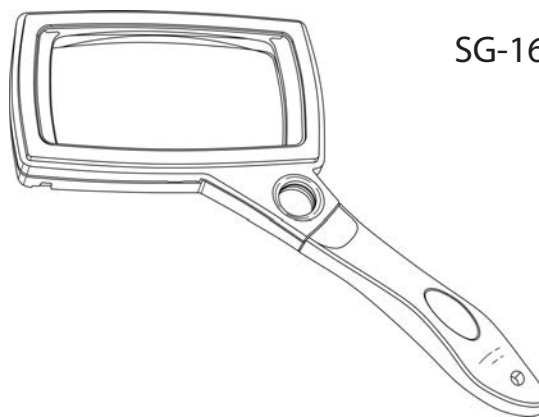

## **Instructions for use:**


### **To Use Hands Free**

Turn magnifier over to reveal legs inside magnifier frame. Pull legs out until they click into open position (Fig. 1-3). Turn magnifier over and place on table as shown in Fig. 4.

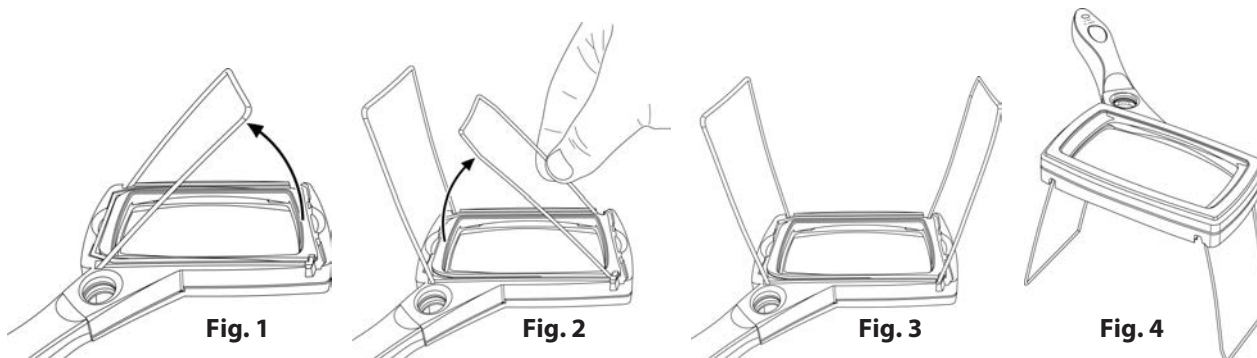

### **Storing Your Magnifier**

Snap legs back into magnifier frame. For safe storage, place magnifier into included cloth pouch when not in use (Fig. 5)

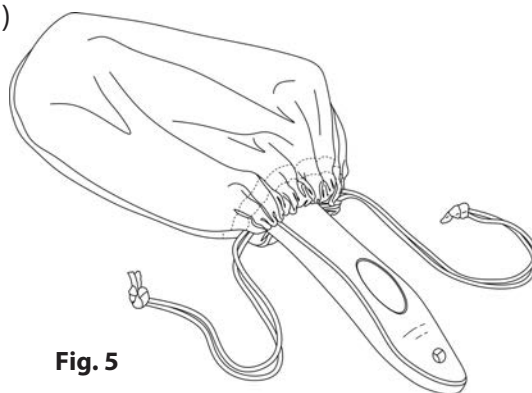

### **Cleaning Your Magnifier**

Clean lens with a soft, clean microfiber cloth by rubbing gently in a circular motion. Moisten the lens cloth with water if needed. Do not use harsh chemicals, solvents or abrasives as they may damage the lens.

### **CAUTION - FIRE HAZARD:**

Keep magnifier away from direct sunlight to prevent accidental fire.

### **Customer Service:**

If you experience any difficulties, please contact us and we will be happy to help you.

#### **In the U.S.A.**

**Phone:** 1-631-963-5000

**Email:** info@carson.com

#### **In the U.K.**

**Phone:** +44 (0) 1938 557440

**Email:** uksupport@carson.com

#### **In the E.U.**

**Phone:** +44 (0) 1938 557440

**Email:** eusupport@carson.com

**For warranty information, visit [www.carson.com/warranty](http://www.carson.com/warranty)**